

**Maintenance Personnel MUST check these parts
and maintain them once a Week! If any damage/inconsistency
is found, please contact the Manufacturer Immediately.**

- Please, dismantle the Top Covers of the Drying Cascade Augers and check the Drying Chambers - Auger, Auger shaft, the integrity of the perforated sheets and the dust layer! In case of dust/material accumulation, the maintenance personnel must clean this area!

ATTENTION – PLEASE WEAR SAFETY GOGGLES!

- Please, dismantle the Gearbox cover and check the chain tightness, gears, bearings, and possibly lubricate them with a suitable lubricant!
- Please, dismantle the Fuel Paddle Sensor and check its correct Functionality.
- Please, dismantle the side Service Cover and check the Adapter Area - Auger, Auger shaft, the integrity of the perforated sheets and the dust layer! In case of dust/material accumulation, the Maintenance personnel must clean this area!

